


Hybrid Bearing  
**Turbo Molecular Pumps**  
**TMP-B70/TMP-B300**



# Features


## Long-life, High performance, Excellent ease of operation

- Optimization of the bearing section and the control mechanism leads to lower running cost.
- TMP-B70 and TMP-B300 have higher hydrogen compression ratio.
- Local operation available
- Mounting direction free

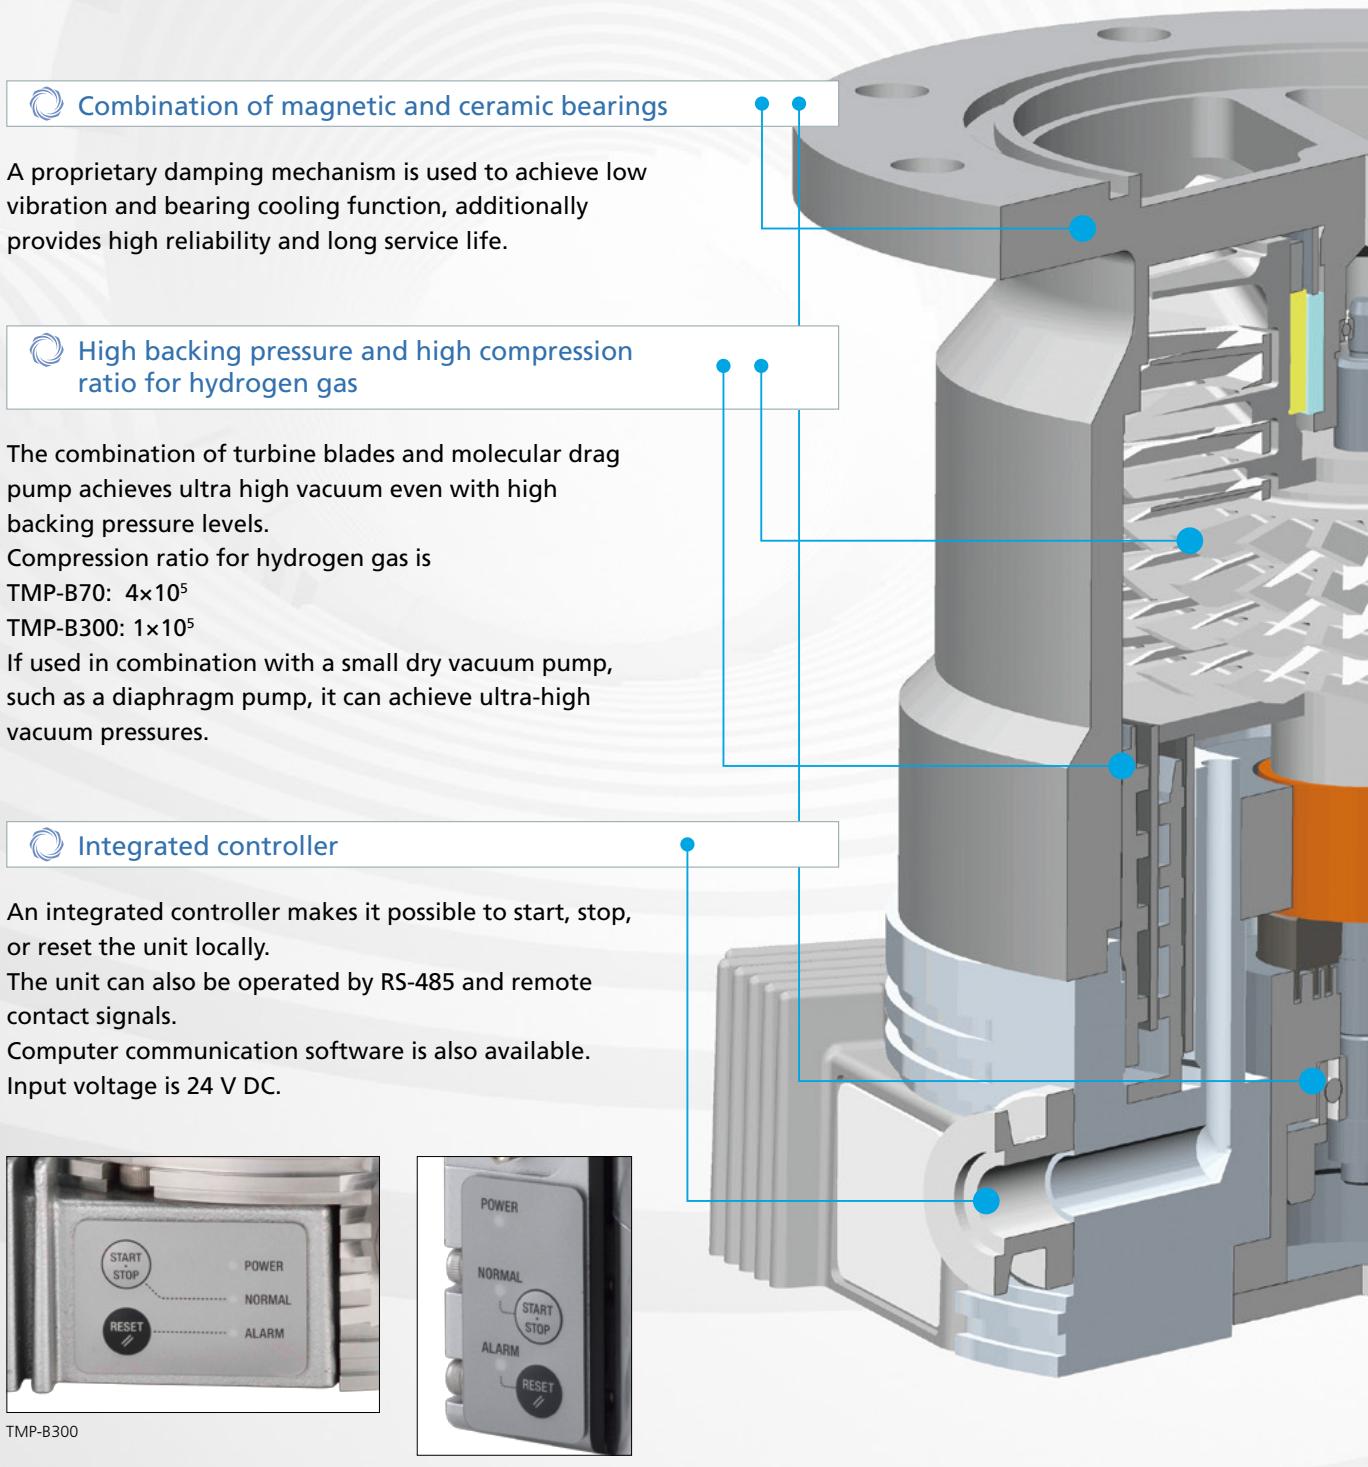

### Low power consumption

This environmentally friendly series features a newly developed controller and a high-efficiency motor, which reduce power consumption.

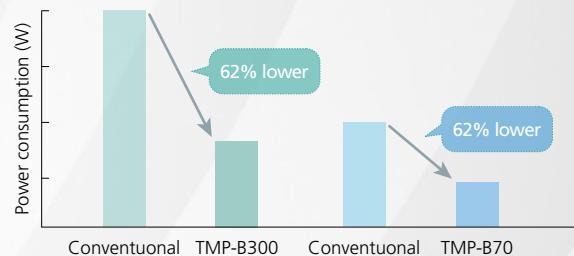

### Low heat-generation motor

Reducing heat generated from the motor helps prevent the bearing temperature from increasing and extends the service life.

### Labyrinth seal prevents backflow (TMP-B300)

This seal helps ensure a clean vacuum by preventing the grease (base oil) used in the ceramic bearing from diffusing.

### Mountable in any orientation

The pump unit can be mounted in vertical, horizontal, diagonal, or inverted orientation.



TMP-B300 (ISO100K)

# Specifications

 **TMP-B70**



This product is certified as Shimadzu's Eco-Products Plus.  
40% reduction in product weight, 56% reduction in product volume, 51% reduction in footprint  
(Compared with conventional Shimadzu's products)

Turbo molecular pump model		TMP-B70			
Cooling method		Natural convection	Forced air	Water (Note 1)	
Ultimate pressure (Note 3)	After baking	(Note 2)	$10^{-8}$ Pa order (Note 3)	$10^{-8}$ Pa order (Note 3)	
	Non-baking	$10^{-6}$ Pa order	$10^{-6}$ Pa order	$10^{-6}$ Pa order	
Pumping speed (Note 4)	N <sub>2</sub>	70 L/s	70 L/s	70 L/s	
	He	60 L/s	60 L/s	60 L/s	
	H <sub>2</sub>	49 L/s	49 L/s	49 L/s	
Pumping speed (NW 40)	N <sub>2</sub>	41 L/s	41 L/s	41 L/s	
	He	46 L/s	46 L/s	46 L/s	
	H <sub>2</sub>	42 L/s	42 L/s	42 L/s	
Compression ratio	N <sub>2</sub>	$> 1 \times 10^9$	$> 1 \times 10^9$	$> 1 \times 10^9$	
	He	$4 \times 10^7$	$4 \times 10^7$	$4 \times 10^7$	
	H <sub>2</sub>	$4 \times 10^5$	$4 \times 10^5$	$4 \times 10^5$	
Critical backing pressure (N <sub>2</sub> gas, 87000 rpm)		1400 Pa	1400 Pa	1400 Pa	
Maximum allowable continuous backing pressure (Note 5)	N <sub>2</sub>	300 Pa (ambient $\leq 25^\circ\text{C}$ )	900 Pa (ambient $\leq 25^\circ\text{C}$ )	900 Pa (ambient $\leq 25^\circ\text{C}$ )	
		200 Pa (ambient $\leq 30^\circ\text{C}$ )	600 Pa (ambient $\leq 35^\circ\text{C}$ )	600 Pa (ambient $\leq 40^\circ\text{C}$ )	
Maximum allowable N <sub>2</sub> gas throughput at continuous pumping		15 SCCM (ambient 25°C)	40 SCCM (ambient 25°C)	40 SCCM (ambient 25°C)	
		10 SCCM (ambient 30°C)	30 SCCM (ambient 35°C)	30 SCCM (ambient 40°C)	
Weight	DN 63CF (ICF 114)	4.8 kg	5.0 kg	4.9 kg	
	VG 65	3.1 kg	3.3 kg	3.2 kg	
	ISO 63K	2.8 kg	3.0 kg	2.9 kg	
	KF 40	2.9 kg	3.1 kg	3.0 kg	
Bearing type		Magnetic bearing and ceramic ball bearing			
Inlet flange		DN 63CF (ICF 114), VG 65, ISO 63K, KF 40			
Outlet flange		KF 16			
Rotated speed		87000 rpm			
Start-up time (up to 80 %)		1.7 minutes			
Mounting position		In any desired direction			
Noise [by Shimadzu's measurement method]		48 dB(A) or less			
Admissible ambient magnetic field	Radial direction	3 mT			
	Axial direction	15 mT			
Input electric power	Voltage	24 V DC $\pm 5\%$			
	Maximum power	120 W			

Note 1: Water temperature :  $\geq$  dew point, 5 - 25°C Flow rate : 1.25 L/min


Note 2: Cannot bake with natural convection.

Note 3: Only pumps with a CF flange can be baked. When baked by a two-stage oil-sealed rotary pump.

Note 4: Without protective net. Pumping speed for N<sub>2</sub> is 68 L/s with a protective net


Note 5: Maximum allowable outlet pressure in which the pump can be operated continuously when inlet pressure is ultimate pressure.

## Pumping speed curve

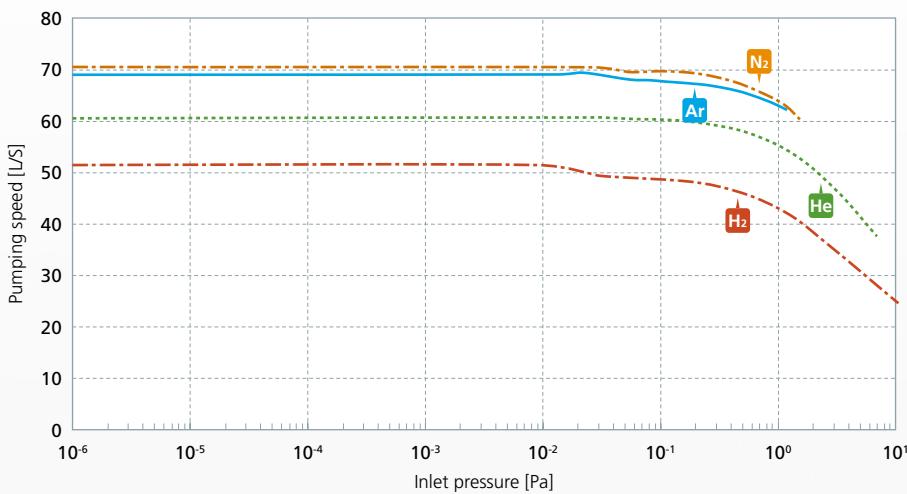

Note : Without a protective net

## Compression ratio curve

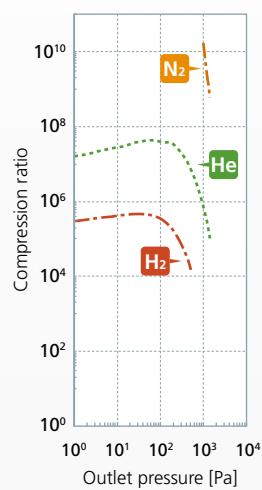

## TMP-B300



This product is certified as Shimadzu's Eco-Products Plus.  
58% reduction in power consumption, 72% reduction in product weight, 73% reduction in product volume, 79% reduction in footprint  
(Compared with conventional Shimadzu's products)

Turbo molecular pump model		TMP-B300		TMP-B300L
Cooling method		Natural convection	Forced air	Water (Note 1)
Ultimate pressure (Note 3)	After baking	(Note 2)	$10^{-8}$ Pa order (Note 3)	$10^{-8}$ Pa order (Note 3)
	Non-baking	$10^{-6}$ Pa order	$10^{-6}$ Pa order	$10^{-6}$ Pa order
Pumping speed (Note 4)	N <sub>2</sub>	280 L/s	280 L/s	280 L/s
	He	270 L/s	270 L/s	270 L/s
	H <sub>2</sub>	220 L/s	220 L/s	220 L/s
Compression ratio	N <sub>2</sub>	$> 1 \times 10^9$	$> 1 \times 10^9$	$> 1 \times 10^9$
	He	$7 \times 10^6$	$7 \times 10^6$	$7 \times 10^6$
	H <sub>2</sub>	$1 \times 10^5$	$1 \times 10^5$	$1 \times 10^5$
Critical backing pressure (N <sub>2</sub> gas, 60000 rpm)		1300 Pa	1300 Pa	1300 Pa
Maximum allowable continuous backing pressure (Note 5)	N <sub>2</sub>	100 Pa (ambient $\leq 35^\circ\text{C}$ ) 930 Pa (ambient $\leq 35^\circ\text{C}$ )	1000 Pa (ambient $\leq 25^\circ\text{C}$ ) 930 Pa (ambient $\leq 35^\circ\text{C}$ )	1300 Pa (ambient $\leq 40^\circ\text{C}$ )
Maximum allowable N <sub>2</sub> gas throughput at continuous pumping		10 SCCM (ambient 25°C) 4 SCCM (ambient 35°C)	100 SCCM (ambient 25°C) 40 SCCM (ambient 35°C)	240 SCCM (ambient $\leq 40^\circ\text{C}$ )
Weight	DN 100CF (ICF152)	9.4 kg	9.7 kg	10.1 kg
	VG 100	6.3 kg	6.6 kg	7.0 kg
	ISO 100K	6.0 kg	6.3 kg	6.7 kg
Bearing type	Magnetic bearing and ceramic ball bearing			
Inlet flange	DN 100CF, VG 100, ISO 100K			
Outlet flange	KF 16			
Rotated speed	60000 rpm			
Start-up time (up to 80 %)	3.5 minutes			
Mounting position	In any desired direction			
Noise [by Shimadzu's measurement method] (Note 6)	50 dB(A) or less			
Admissible ambient magnetic field	Radial direction	3 mT		
	Axial direction	15 mT		
Input electric power	Voltage	24 V DC $\pm 5\%$		
	Maximum power	180 W		

Note 1: Water temperature :  $\geq$  dew point,  $\leq 28^\circ\text{C}$  Flow rate : 1 L/min

Note 2: Cannot bake with natural convection.


Note 3: Only pumps with a CF flange can be baked. When baked by a two-stage oil-sealed rotary pump.

Note 4: Without protective net. Pumping speed for N<sub>2</sub> is 260 L/s with a protective net.


Note 5: Maximum allowable outlet pressure in which the pump can be operated continuously when inlet pressure is ultimate pressure.

Note 6: Measured for the ISO flange model.

### Pumping speed curve

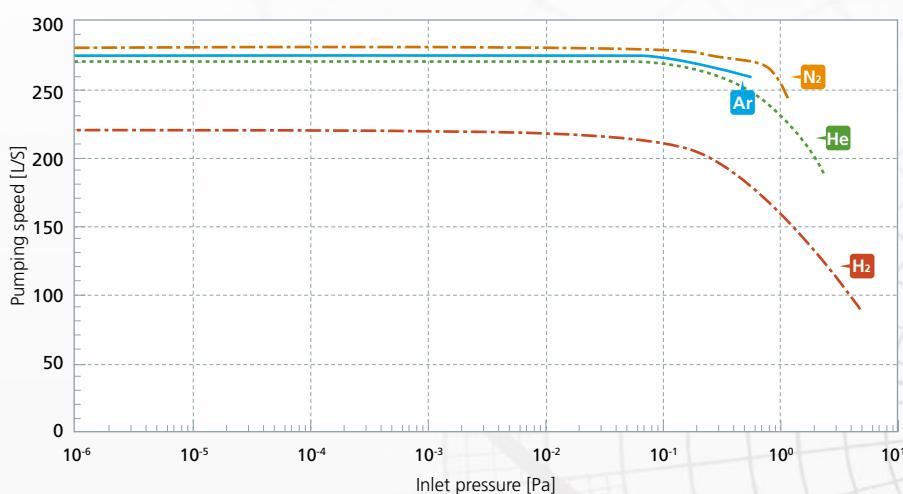

### Compression ratio curve

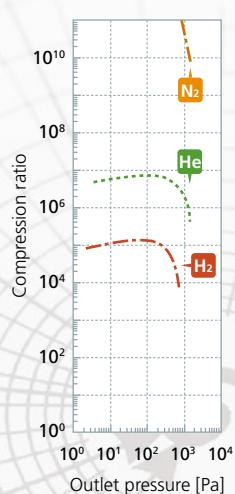

Note : Without a protective net

## Dimensions


Dimensions do not include accessories.

© TMP-B70

(units: mm)

Inlet flange	øA	B	n-ød	P.C.D.	C	D	E
DN 63CF (ICF114)	114.3	17	8-ø8.4	ø92.2	72	142.2	167.2
VG 65	145	10	4-ø12	ø120	53.8	124.5	149
ISO 63K	95	12	-	-	53.8	124.5	149
KF 40	55	-	-	-	72.8	143.5	168

Dimensions E is the same regardless of the cooling method.

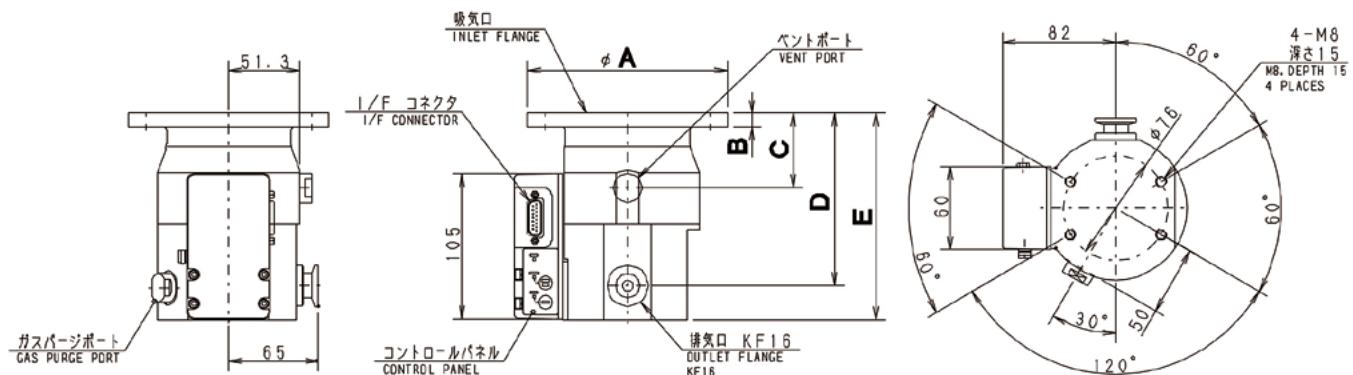


TMP-B300

(units: mm)

Inlet flange	øA	B	n-ød	P.C.D.	C	D	E	E'
DN 100CF (ICF152)	152.4	19.5	16-ø8.5	ø130.3	122	176	207	222
VG 100	185	12	8-ø12	ø160	110	164	195	210
ISO 100K	130	12	-	-	110	164	195	210

The E dimension depends on the cooling method. (E : Air cooling, E' : Water cooling)

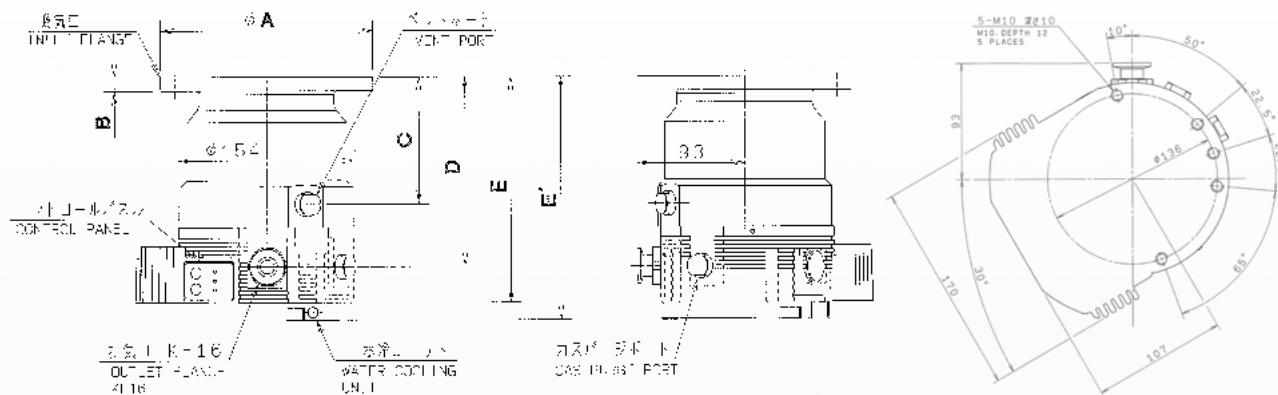

# Accessories

## VENTING VALVE

The venting valve is connected to the venting port on the casing of the main pump unit, and is used to inject venting gas when stopping the pump to restore atmospheric pressure inside the pump. It then prevents oil vapor of the backing pump from diffusing back toward the inlet port. By using the interface cable, power can be supplied from the controller.



## BAKING HEATER

Discharging gases by controlling temperature at high vacuum side of a pump casing to 85 °C helps to reach lower pressure in shorter time. Please switch the baking heater ON/OFF by the customer.



## EXAMPLE OF INSTALLATION



## Gas purge adapter

When evacuating heavier gases such as argon, the prevention of dust entering into a bearing by N<sub>2</sub> purge reduces the influence on a bearing.



※A flowmeter is NOT included. Please use a flowmeter with an adjustment valve.

## Cooling options

Use an air cooling fan or a water cooling unit in the following cases.

- » If ambient temperature becomes high (TMP-B70: >30°C, TMP-B300: >35°C)
- » If gas is supplied from inlet,
- » If the backing pressure is high,
- » If a baking heater is used,



## AIR COOLING FAN

An air cooling fan can receive power from connector on the controller. It is possible to install an air cooling fan by the customer.



## WATER COOLING UNIT



# Display unit with power supply: EI-DPS240

## Features

- Easy connection just only connecting TMP cable
- Display panel with excellent visibility
- Intuitive operation
- A vacuum gauge can be connected  
Vacuum pressure is indicated by receiving 0-10 VDC voltage which correspond to logarithm of pressure.
- Convenient interlock functions




Delayed start-up of TMP	EI-DPS240 sends start signal to a backing pump, then starts the TMP in a preset time.
TMP start-stop which interlocked vacuum gauges	EI-DPS240 sends start signal to a backing pump, then starts the TMP after a measured pressure reaches a preset value. EI-DPS240 stops the backing pump and the TMP when the measured pressure exceeds a preset value.


## Specifications

Items	Details
Model	EI-DPS240
Input voltage	100-240 V AC (+10 %/-15 %) Single-phase 50/60 Hz
Power consumption	Maximum 280 VA
Weight	2.0 kg

## Dimensions

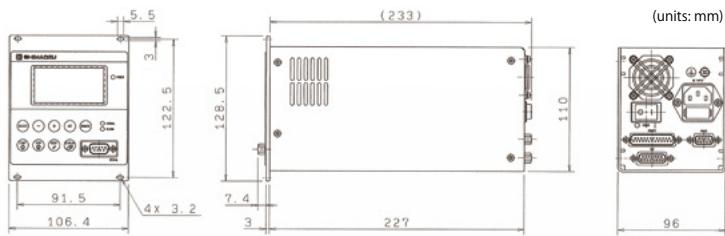

## Example of connections

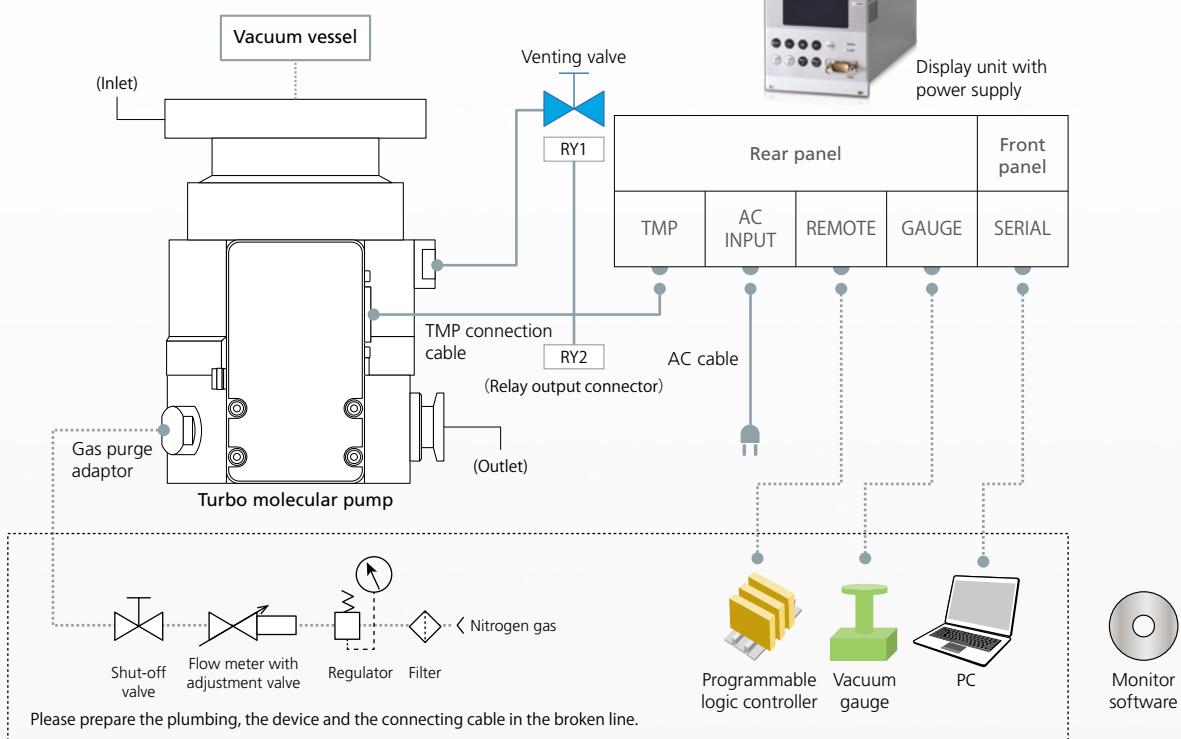

# Power supply set

## Features

- Simple configuration without pressure control and interlock functions.
- Connect the interface cable to supply 24 VDC to the turbo molecular pump.

- Power supply set

- Interface cable (accessory)

A minimum 24 V DC 120 W power supply is required when using TMP-B70. Also a minimum 24 V DC 180 W power supply is required when using TMP-B300.


An AC cable is included.




## Specifications

Items		Details
Input	Voltage	85~265 V AC or 120~330 V DC
	Frequency	Single-phase 50/60 Hz
Output	Voltage	24 V DC
	Maximum power	336 W
Operating temperature		-10~+70 °C
Weight		1.0 kg

## Dimensions

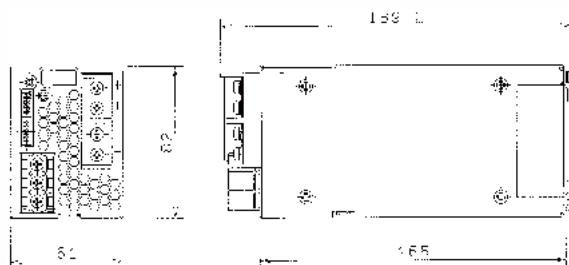

## Example of connections

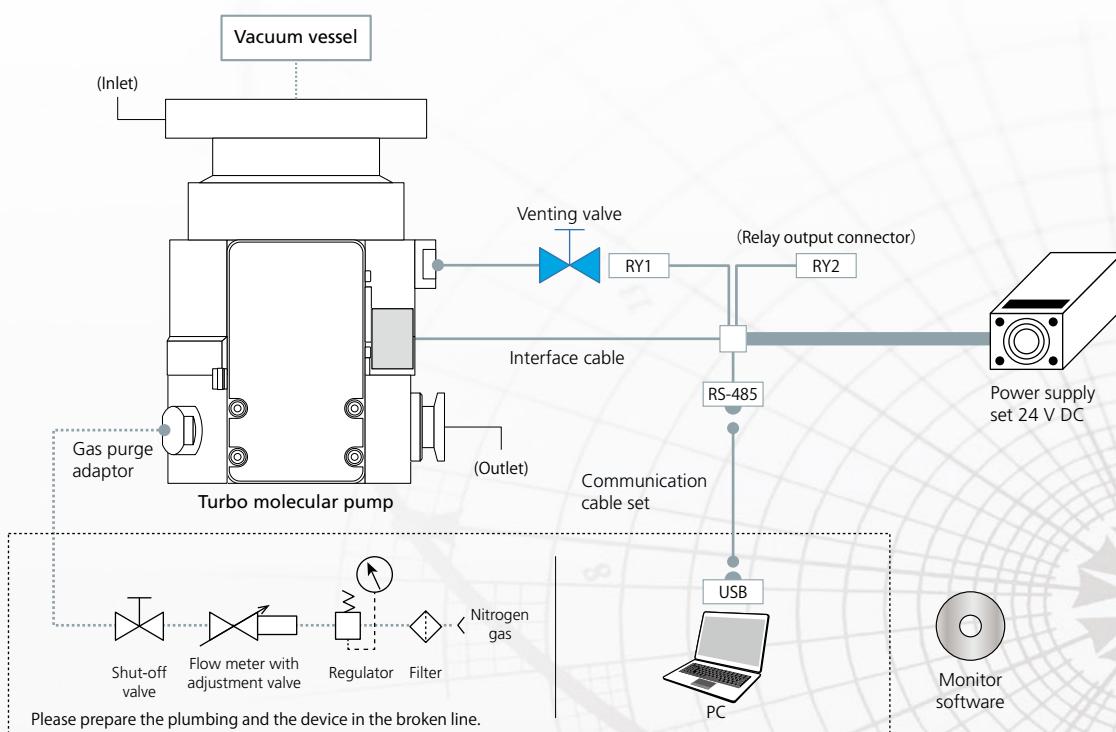

# Main unit and accessories

## TMP-B70

Regardless of the cooling method, the P/N is common.

Description	Remarks	P/N
TMP-B70, DN 63CF (ICF114)	Inlet flange: DN 63CF (ICF114)	263-48513-01
TMP-B70, VG 65	Inlet flange: VG 65	263-48513-02
TMP-B70, ISO 63K	Inlet flange: ISO 63K	263-48513-03
TMP-B70, KF 40	Inlet flange: KF 40	263-48513-04



ICF114



VG65



ISO63K



KF40

## TMP-B300

### For natural convection or Forced air cooling method

Description	Remarks	P/N
TMP-B300, DN 100CF (ICF152)	Inlet flange: DN 100CF (ICF152)	263-18740-01
TMP-B300, VG 100	Inlet flange: VG 100	263-18740-02
TMP-B300, ISO 100K	Inlet flange: ISO 100K	263-18740-03

### For water cooling method

Description	Remarks	P/N
TMP-B300L, DN 100CF (ICF152)	Inlet flange: DN 100CF (ICF152)	263-48356-01
TMP-B300L, VG 100	Inlet flange: VG 100	263-48356-02
TMP-B300L, ISO 100K	Inlet flange: ISO 100K	263-48356-03



ICF152



VG100



ISO100K

No	Description	Remarks	P/N	
			TMP-B70	TMP-B300
1	Air cooling fan	Directly attached to side of pump body (Note 1)	263-46375	263-44455
		Directly attached to bottom of pump body (Note 1)	263-46375-01	
2	Water cooling unit	Directly attached to side of pump body	263-46386	
		Directly attached to bottom of pump body		263-44914-02
3	Venting Valve	Normally close	263-91168	
4	Gas purge adapter	KF 10	263-45673-01	
5	Baking heater, B70, 100 V	Only for CF flange model, 100 V AC, 65 W (Note 2)	263-46382-01	
	Baking heater, B70, 230 V	Only for CF flange model, 230 V AC, 65 W (Note 2)	263-46382-02	
	Baking heater, B300, 100 V	Only for CF flange model, 100 V AC, 200 W (Note 2)		263-44652-01
	Baking heater, B300, 230 V	Only for CF flange model, 230 V AC, 200 W (Note 2)		263-44652-02
6	Clamp for outlet	KF 16	035-06032-01	
7	Centering ring for outlet	KF 16	035-06032-12	
8	Clamp for inlet	For KF 40	263-46333	
9	Single claw clamp for inlet	4-M8	263-90540-01	
		8-M8		263-90540-02
10	Double claws clamp for inlet	4-M10	263-90541	
11	Monitor software TypeB	For TMP-B70/TMP-B300	263-45722	

(Note 1) Please select according to mounting position of an air cooling fan.

(Note 2) Please use a baking heater together with an air cooling fan or a water cooling unit. In case of using 200 V AC, please select for 230 V AC.

#### When using EI-DPS240 (Note 3)

No	Description	Remarks	P/N
20	EI-DPS240	For use in Japan	263-48164
		For use in except Japan	263-48164-01
21	AC cable JU	Power supply cable for use in Japan and North America	071-60821-08
		Power supply cable for use in Europe	071-60845-01
22	AC cable EU	Power supply cable for use in China	071-60827-05
22	Connecting cable for TMP, 1MT		263-91228-01
	Connecting cable for TMP, 3MT		263-91228-03
	Connecting cable for TMP, 5MT		263-91228-05
	Connecting cable for TMP, 7MT		263-91228-07
	Connecting cable for TMP, 10MT		263-91228-10

#### When using power supply set (Note 3)

No	Description	Remarks	P/N
30	Power supply set DC24V JU, 1MT	Input voltage: 100-240 V AC With a 100 V AC plug for use in Japan and North America	263-44497-01
	Power supply set DC24V JU, 3MT		263-44497-03
	Power supply set DC24V JU, 5MT		263-44497-05
	Power supply set DC24V EU, 1MT	Input voltage: 100-240 V AC With a 230 V AC plug for use in Europe	263-44497-51
	Power supply set DC24V EU, 3MT		263-44497-53
	Power supply set DC24V EU, 5MT		263-44497-55
31	Interface cable, 1MT	Connecting cable for Power supply set and TMP With connectors for RS485 and venting valve Length: 1m, 2m, 3m, 5m	263-44408-01
	Interface cable, 2MT		263-44408-02
	Interface cable, 3MT		263-44408-03
	Interface cable, 5MT		263-44408-05
32	Interface connector	Connector for 24 V DC supply and communications D-sub 15 pin female with connector hood	263-45677
33	Communication cable set, 1MT	USB-RS485 converter and RS485 communication cable Length: 1m, 3m, 5m	263-45678-01
	Communication cable set, 3MT		263-45678-03
	Communication cable set, 5MT		263-45678-05

(Note 3) Please contact Shimadzu about a power supply and a cable specifications for use outside Japan.

# Turbo Molecular Pump Service Network

Our global network provides you safety, trust and satisfaction promptly.  
In need of overhaul or repairment, please contact to our service bases.

If your area is not marked in the map below, Please contact to the closest base or our headquarters in Kyoto.  
We kindly ask for your understanding that we are not able to provide our service in certain areas even marked in the map below.

## Japan

### Shimadzu Corporation

1 Nishinokyo Kuwabara-cho, Nakagyo-ku, Kyoto 604-8511  
PHONE: 81-75-823-1693  
FAX: 81-75-823-3683

## Asia and Oceania

### SHIMADZU (CHINA) CO., LTD.

(OFFICE)  
Building B2, China Fortune Wisdom-Sharing City, NO. 180 Yizhou Road, Xuhui District, Shanghai 200233 P.R.China  
PHONE:86-21-3419-3888

Shimadzu Vacuum Equipment (Shanghai) Co.,Ltd  
(SHANGHAI SERVICE CENTER)  
West of 3rd Floor, Building D, No.2059 Du Hui Road, Minhang District, Shanghai 201108 P.R.China  
PHONE:86-21-5296-7532

Xian Shimadzu Vacuum Equipment Co.,Ltd  
(XIAN SERVICE CENTER)  
18 Building 2c Hi-tech Enterprises Accelerator Park, No.2 Qinling West Road, Xi'an Caotang S&T Industrial Base of Xi'an Hi-tech Zone XI'AN 710304 P.R.China  
PHONE : 86-29-8902-5998

Shimadzu (Wuhan) Vacuum Equipment Co.,Ltd  
(WUHAN SERVICE CENTER)  
Building B9-5-2, OUV Technology City, Gedian Development Zone, EZHOU City, Hubei Province 436032 P.R.China  
PHONE: 86-27-6070-6089

### SHIMADZU TAIWAN INDUSTRIAL MACHINERY CO.,LTD.

(OFFICE)  
3F, No.122-7, Zhonghua Rd., Hukou Township, Hsinchu County 303035, Taiwan (R.O.C.)  
PHONE:886-3-5986008  
FAX:886-3-5986006

(TAINAN SERVICE CENTER)  
No. 1, Ln. 126, Zhengnan 3rd Rd., Yongkang Dist., Tainan City 710007, Taiwan (R.O.C.)  
PHONE:886-6-2532660

### SHIMADZU KOREA VACUUM EQUIPMENT CO., LTD.

9, Deokseongsandan 1-ro, Idong-eup, Cheoin-gu, Yongin-si, Gyeonggi-do, 17130 Korea  
PHONE:82-31-283-0242  
FAX:82-31-333-8857

### QC SCIENTIFIC (M) SDN. BHD.

No. 11A, Jalan Industri PBP 11, Taman Industri Pusat Bandar Puchong, 47100 Puchong, Selangor, Malaysia  
PHONE:60-3-8062-3988

## North America

### Shimadzu Industrial Equipment USA

(SANTA CLARA OFFICE)  
1880 Hartog Drive  
San Jose, California 95112  
PHONE:1-408-566-0960  
FAX:1-408-566-0961

(AUSTIN SUPPORT CENTER)  
9210 Cameron Road, Suite 900, Austin, TX78754  
PHONE:1-512-339-6007  
FAX:1-512-339-6202

## Europe

### infraserv Vakuumservice GmbH

Gleiwitzerstrasse 8, 85386 Eching, Germany  
PHONE:49-89-319-01-03



This product is certified as  
Shimadzu's Eco-Products Plus.



Management System  
ISO 9001:2015  
www.tuv.com  
ID 0091004755



JQA-EM7749  
SHIMADZU CORPORATION  
Shimadzu Corporation Head Office,  
Factories, and Related Offices

Company names, product/service names and logos used in this publication are trademarks and trade names of Shimadzu Corporation or its affiliates, whether or not they are used with trademark symbol "TM" or "®".  
Third-party trademarks and trade names may be used in this publication to refer to either the entities or their products/services. Shimadzu disclaims any proprietary interest in trademarks and trade names other than its own.

For Research Use Only. Not for use in diagnostic procedures.  
The contents of this publication are provided to you "as is" without warranty of any kind, and are subject to change without notice. Shimadzu does not assume any responsibility or liability for any damage, whether direct or indirect, relating to the use of this publication.

